#### REMOTE CONTROL MORE AND LESS, 10 STEPS, WITH RESET Ref: WAAB1111 TO ZERO ON EACH POWERING FOR 1 PWM PROPORTIONAL SOLENOID VALVE

Data sheet DSENWAAB1111 - september 2016 - Revised : no revised

### **PRESENTATION**

This module regulates the current drawn by the valve's coil according to adjustable setpoint by 2 digital inputs MORE and LESS.

The setpoint is reset to zéro on each power turn off. So the set point is equal to zero each

The proportional valve aperture is between a minimum and a maximum threshold defined by two potentiometers incorporated on the rear side.

The valve's coil is not supplied when the setpoint is zero.

The gradient is adjusted by a third potentiometer at the rear side.

A flashing red LED indicates the correct module state.

## **APPLICATION**

- To control an hydraulic proportional valve 12VDC and 24VDC.
- To control an hydraulic motor speed through a proportional valve.

## **PERFORMANCE**

- Power supply: 9VDC to 32VDC.
- Regulation of circulating current in the coil, therefore the valve's aperture is independent of the supply voltage and the oil temperature.
- Accept proportional valves 12VDC and 24VDC (from 0 to 3A).
- 3 potentiometers on the rear side (MIN, MAX and GRADIENT).
- By adjusting the MIN and MAX, the adjustment range by + and — is bounded.
- 10 steps between the MIN and MAX.
- Protection against overvoltage, short circuit and reverse polarity.
- Plug-type connector: minifit 8 points
- Fixing by a M4 screw.


# SUPPLIED ACCESSORIES



1 strand ( wires 1mm<sup>2</sup>, 1m, type automotive) with 1 minifit connector.

**ETUDES ET FABRICATION ELECTRONIQUES** 



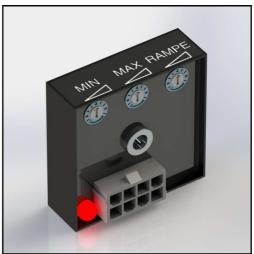

### **FULFILS THE STANDARDS**

- **CE** mark compliant with 2014/30/UE
- E mark (ECE R10.05) N° 10R-05-13766 compliant with 2009/19/EC

**EMC** ISO11452-4

ISO61000-4-2 **ESD** 

Immunity: ISO7637-2

Protection: IP66/67

Vibration-shock: EN60068-2-32;-27;-64;-29

Supply voltage: 9V à 32V ASAE EP 455-§5.10.1


Operating temperature: -40, +85°C ASAE EP 455-§5.1.1 et EN60068-2-1;-2;-14;-30;-78

REACH (1907/2006) and RoHS (2011/65/EU)

#### REMOTE CONTROL MORE AND LESS, 10 STEPS, WITH RESET Ref: WAAB1111 TO ZERO ON EACH POWERING FOR 1 PWM PROPORTIONAL SOLENOID VALVE

Data sheet DSENWAAB1111 - september 2016 - Revised : no revised

## WORKING

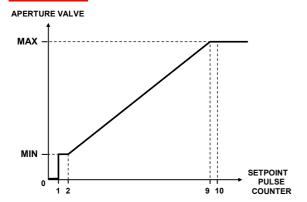

10 pulses on input PLUS are required to open the valve from minimum to maximum. 10 pulses on input LESS are required to close the valve from maximum to minimum.

Aperture setting MIN: Set the setpoint to 0 with the input LESS then increase the setpoint of one pulse until the LED blinks. After, set minimal aperture with MIN potentiometer on the rear panel.

Aperture setting MAX: Set the setpoint to the max with the input PLUS. After, set maximal aperture with MAX potentiometer on the

GRADIENT setting: Time between the minimum and maximum aperture opening, setting the GRADIENT potentiometer on the rear



#### Running red light indicator:

If the valve is opened, the light indicator blinks:

If 2 flashes: PWM duty cycle < 5% If 4 flashes: PWM duty cycle > 95%.

If 6 flashes: Valve shorted.

If 7 flashes: Valve not connected.

#### Information:

If the setpoint is at zero (pulse counter), the LED is off (1 flash every 5 seconds) and the proportional valve is no longer supplied.

### **BUILDING IN SAFETY**

All brands and all types of electronic modules can fail. Thus the necessary protection against the serious consequences of module failure should always be built into the system. For each application, an assessment should be made for the consequences of electronic module failure and uncontrolled or blocked

NGV ELECTRONIQUE does not always have a complete view of the customer product design and application, so he assumes no liability for applications assistance or customer product design. Customers are responsible for their products and applications using NGV ELECTRONIQUE components. To minimize the risks associated with customer products and applications, customers should provide adequate design and operating safeguards


NGV ELECTRONIQUE reserve the right to make corrections, modifications, enhancements, improvements, and other changes to its products and services at any time and to discontinue any product or service without notice.

Reproduction of information in this data sheets is permissible only if reproduction is without alteration and is accompanied by all associated warranties, conditions, limitations, and noticed.


## **FEATURES**

	Va	Value	
	MIN	MAX	Unit
Supply voltage	9	32	VDC
Consumption without valve	1	2	mA
Operating temperature	-40	+85	°C
Storage temperature	-40	+90	°C
Valve current supply	0	3	Α
Drift current between −25°C and +70°C	0	+/-0.5	%FS
Drift current between 9V and 32V	0	+/-0.5	%FS
Gradient setting	0	10	s
PWM frequency	1:	125	
Weight	3	30	

# **WIRING**

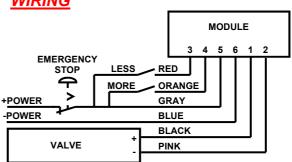

### MECHANICAL DESIGN (in mm)

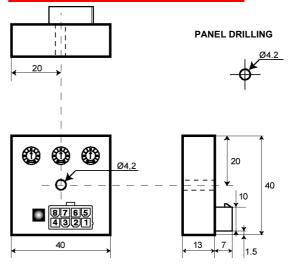

Tracability label description: (example)

V02bf → 02: Software Version, bf: Hardware Version Ref: NGDF7536 → Product reference

Ser: 1611-0003CW → tracability

16: Year, 11: Month, 0003: serial N°, CW: operator



2/2